

# Application Instructions

## You will need:


- an iron
  - a firm flat surface - a table is better than an ironing board
  - a damp sponge
  - a thin piece of cloth
  - your garment
  - and an iron-on emblem.
1. *Switch on your iron, set it to the maximum temperature and allow it to warm up.*
  2. *Very lightly dampen the area where you want to apply the emblem.*
  3. *Place the emblem with the embroidery facing you*
  4. *Cover the emblem with the thin cloth and press as firmly as you can for 60 seconds on both sides of the garment. Do not use steam.*
  5. *Turn the garment inside out and repeat the process*
  6. *Check that the edges are properly bonded and allow the garment to cool*

The bond reaches maximum strength after 24 hours so try to avoid the wearing the garment during that period. The garment can be washed according to the care label

## Positioning the emblem


The bottom of the emblem needs to be lined up with the bottom of the button band, and positioned 3"-4" from the centre of the garment, as below.

## For a polo-shirt

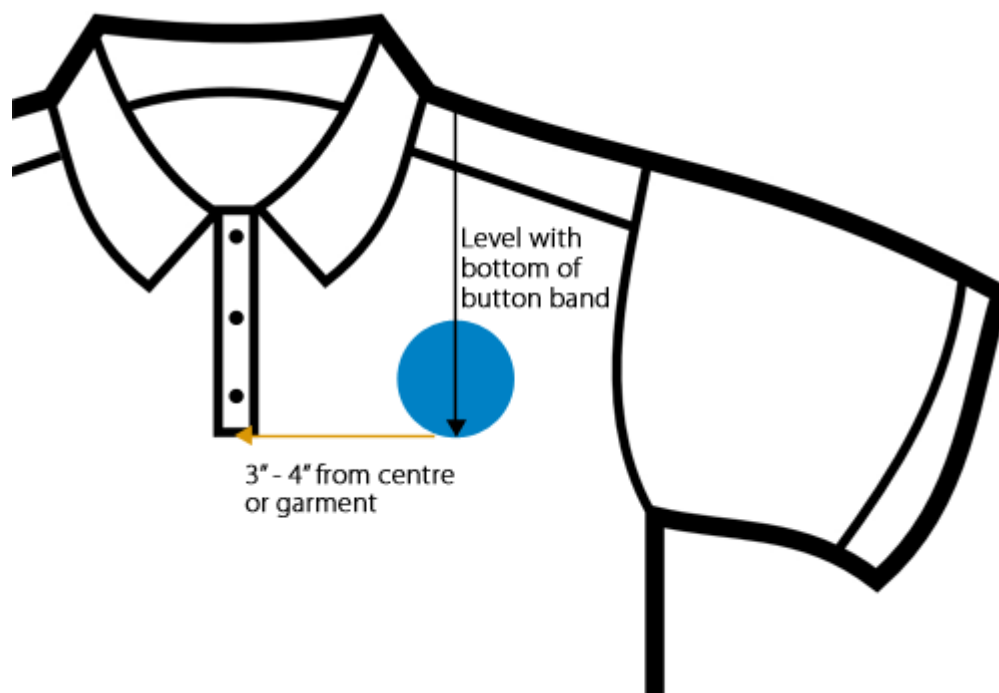

Instructions continue over the page →

## For a sweatshirt

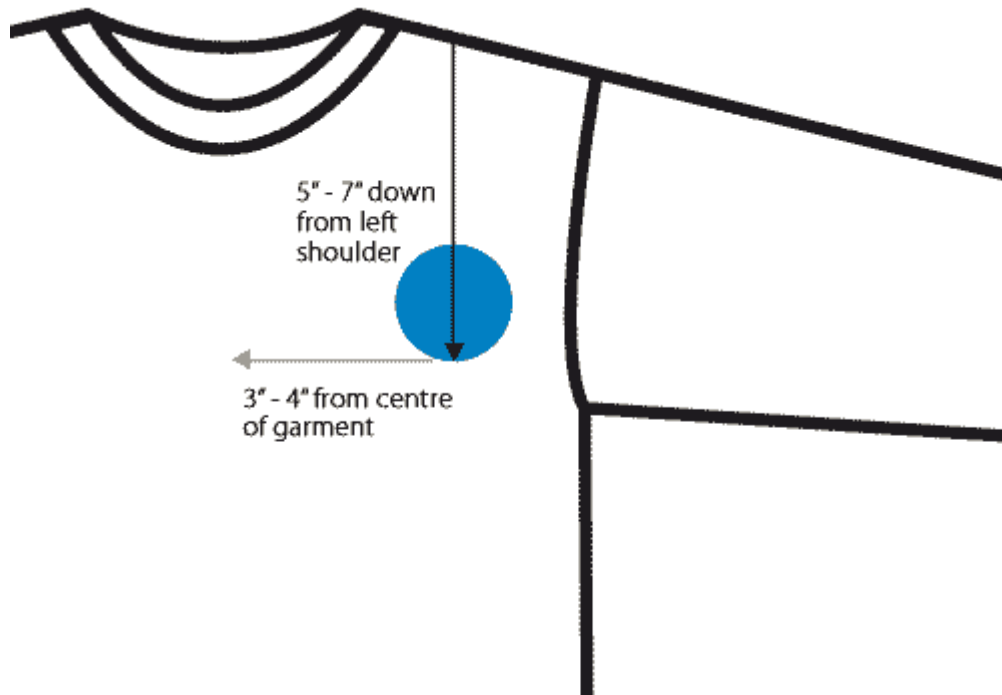

## How they work...

Our embroidered emblems are easy to apply using a standard domestic iron. There's no sewing involved and so anyone can get a professional looking finish in minutes.

The special heat backing uses the very latest bonding agents developed by [Bemis Associates](#) a world leader in the development and manufacture of heat bond technology for the clothing industry.

Once in place the emblem is fully machine washable and can be ironed as normal. The polyester threads are colourfast and will not pucker.

And unlike traditional embroidery there's no scratchy backing to irritate young skin.

Our emblems are designed to bond to most widely used fabrics containing: cotton, polyester, acrylic and mixtures. Because it is very sensitive to heat and unusually has a waterproof coating we do recommend nylon garments for our emblems.